

1. Mounting plate C-MOUNT-LT-37

The mounting plate type **C-MOUNT-LT-37** can be used in connection with the master/slave laser displacement sensors type **L-LAS-LT-37-MA** and **L-LAS-LT-37-SL**. At this, the laser sensors can be fixed on different positions; thus, the system can be adjusted for the respective object.

