


# L-LAS Series

## ▶ L-LAS-LT-1000-MA/-SL (Master/Slave)

- Line laser <1 mW, wave length 670 nm, laser class 2
- Visible red laser line, typ. 1 mm x 3 mm
- Measuring range Master, Slave: each typ. 950 mm
- Start of measuring range Master/Slave: each at typ. 450 mm
- Resolution Master, Slave: each typ. 400 µm
- Integrated interference filter and red light filter
- CCD line detector with 1024 pixel, 2400 subpixel
- External teach button and potentiometer for tolerance setting
- RS232 interface (USB or Ethernet adaptor available)
- Windows® user interface
- 2 digital inputs, 3 digital outputs
- 1 analog output (voltage 0...+10V, optional current 4...20mA)
- Scan frequency max. 200 Hz
- Switching state indication via 4 LEDs (1x grn, 2x red, 1x yel)
- Optics cover made of scratch-resistant glass

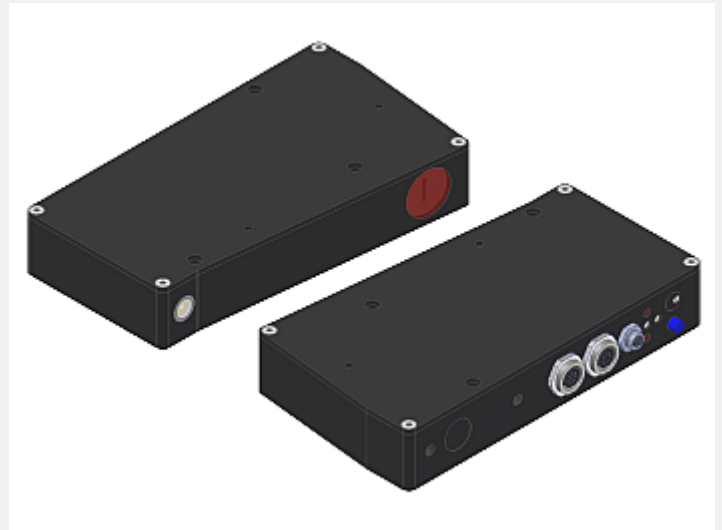

### Design


#### Product name:

**L-LAS-LT-1000-MA** (Master, analog 0...+10V)

**L-LAS-LT-1000-MA-4/20** (Master, analog 4...20mA)

**L-LAS-LT-1000-SL** (Slave)

(incl. Windows® PC software L-LAS-LT-MS-Scope)

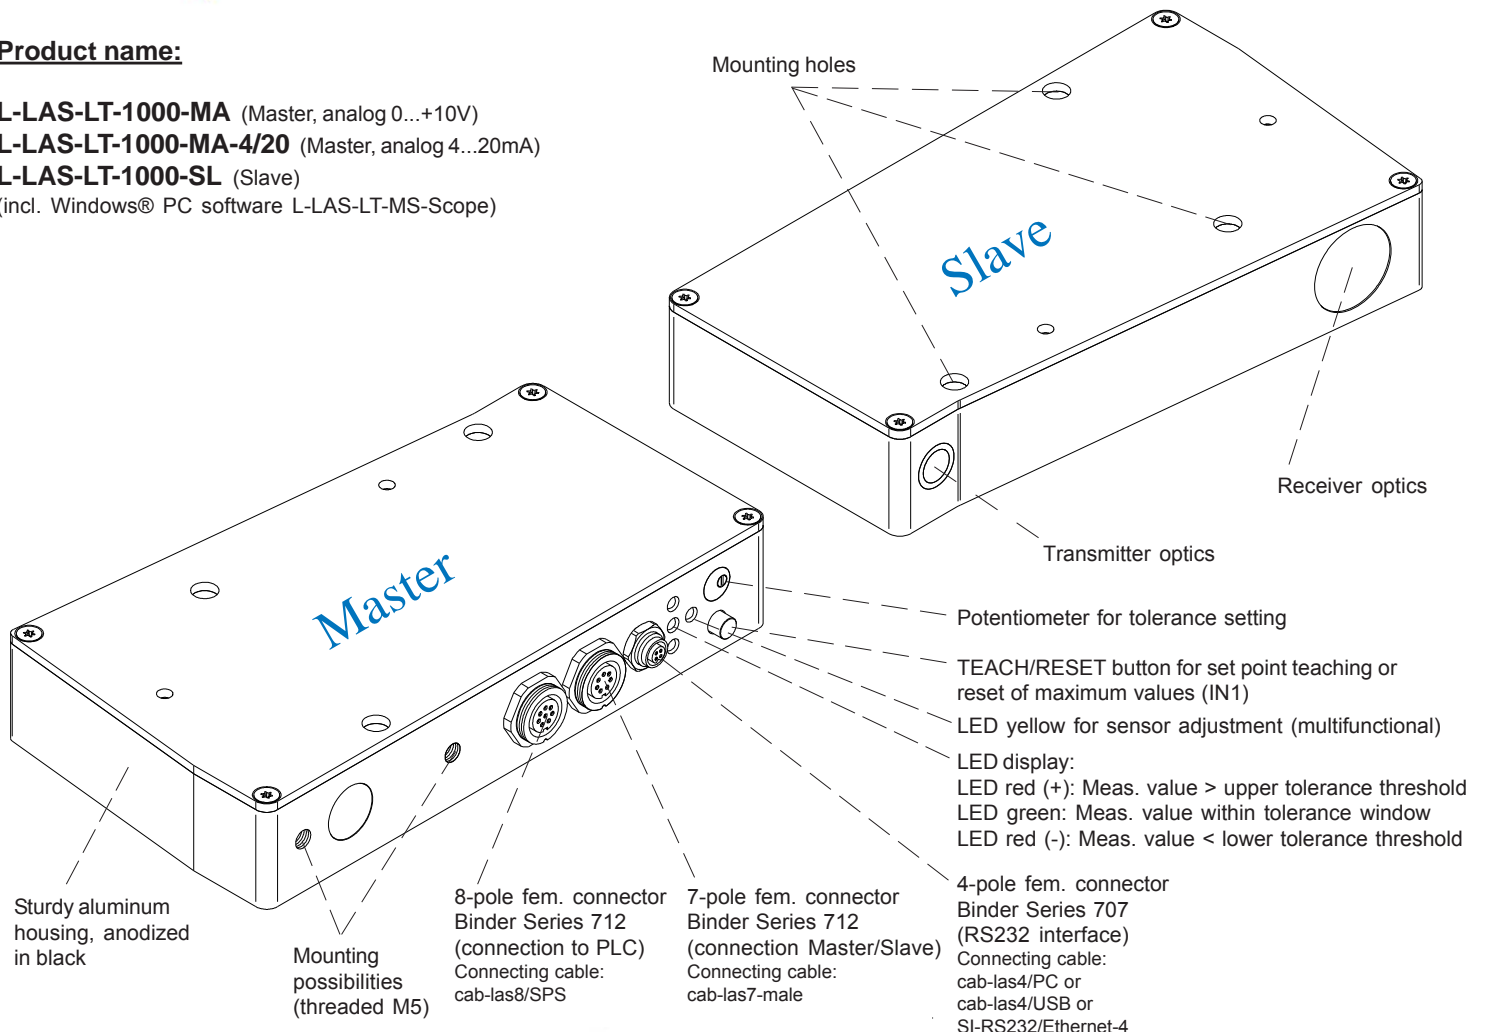





**Technical Data**

Model	L-LAS-LT-1000-MA L-LAS-LT-1000-SL	L-LAS-LT-1000-MA-4/20 L-LAS-LT-1000-SL
Light source	Semi-conductor laser, 670 nm, DC operation, 1 mW max. opt. power, laser class 2 acc. to DIN EN 60825-1. The use of these laser transmitters therefore requires no additional protective measures.	
Measuring range	MA and SL: each typ. 950 mm	
Start of measuring range	MA and SL: each typ. 450 mm (measured from housing edge, cf. picture beam path)	
End of measuring range	MA and SL: each typ. 1400 mm (measured from housing edge, cf. picture beam path)	
Resolution	MA and SL: each typ. 400 µm (i.e. 2x 400 µm)	
Reproducibility	MA and SL: each typ. ± 400 µm (i.e. 2x ± 400 µm)	
Linearity	MA and SL: each 0.3% FSR (full scale range) (i.e. 2x 0.3%)	
Laser line geometry	typ. 1 mm x 3 mm	
Optical filter	Interference filter, red light filter	
Analog output (1x)	voltage output (0 ... +10V)	current output (4 ... 20mA)
Digital outputs (3x) (OUT0, OUT1, OUT2)	pnp bright-switching / npn dark-switching or pnp dark-switching / npn bright-switching, adjustable under Windows®, 100 mA, short-circuit proof	
Digital inputs (2x) (IN0, IN1)	IN0: External trigger, IN1: Teach/Reset (double function) input voltage +Ub/0V, with protective circuit	
Voltage supply	+24VDC (± 10%)	
Sensitivity setting	adjustable via potentiometer TOL or under Windows® via PC	
Laser power correction	adjustable under Windows® via PC	
Current consumption	typ. 200 mA	
Enclosure rating	electronics: IP54, optics: IP67	
Temperature stability	0.01% of measuring range/°C	
Temperature ranges	operating temperature range: -10°C ... +50°C, storage temperature range: -20°C ... +85°C	
Housing material	aluminium, anodized in black	
Housing dimensions	each Master and Slave: LxWxH approx. 138 mm x 77 mm x 25 mm (without flange connectors)	
Type of connector	L-LAS-LT-1000-MA: 8-pole circular fem. connector type Binder 712 (PLC/Power) 4-pole circular fem. connector type Binder 707 (PC/RS232) 7-pole circular fem. connector type Binder 712 (connection Master/Slave) L-LAS-LT-1000-SL: 8-pole circular fem. connector type Binder 712 (Power) 7-pole circular fem. connector type Binder 712 (connection Master/Slave)	
Connecting cables	connection to PC (Master): 1x cab-las4/PC (-w) or cab-las4/USB (-w) or SI-RS232/Ethernet-4 connection to PLC (each Master and Slave): 2x cab-las8/SPS or cab-las8/SPS-w connection Master with Slave: 1x cab-las7-male or cab-las7-male-w	
Teach/Reset button	for set point teaching or for reset of maximum values via input IN1	
LED display	LED red (+) : Measuring value > upper tolerance threshold LED green : Measuring value within tolerance window LED red (-) : Measuring value < lower tolerance threshold LED yellow : for sensor adjustment (multifunctional)	
EMC test acc. to	DIN EN 60947-5-2	
Scan frequency	max. 200 Hz	
Max. switching current	100 mA, short-circuit proof	
Interface	RS232, parameterisable under Windows®	
Output polarity	bright-/dark-switching, can be switched under Windows®	

Dimensions

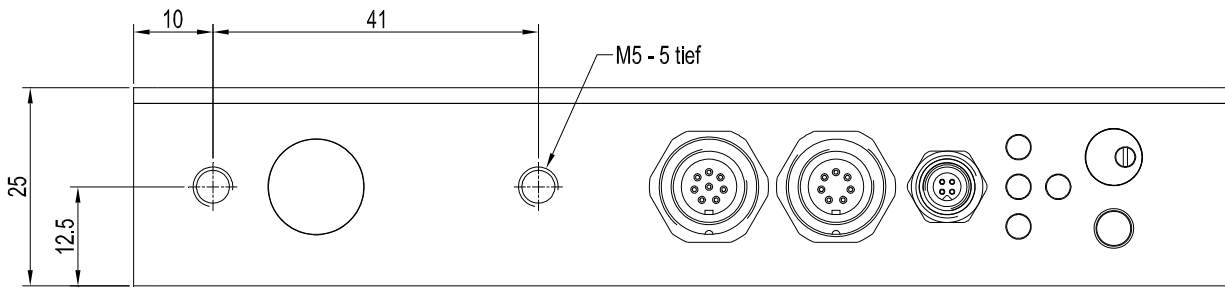

L-LAS-LT-1000-MA  
 L-LAS-LT-1000-MA-4/20  
 L-LAS-LT-1000-SL

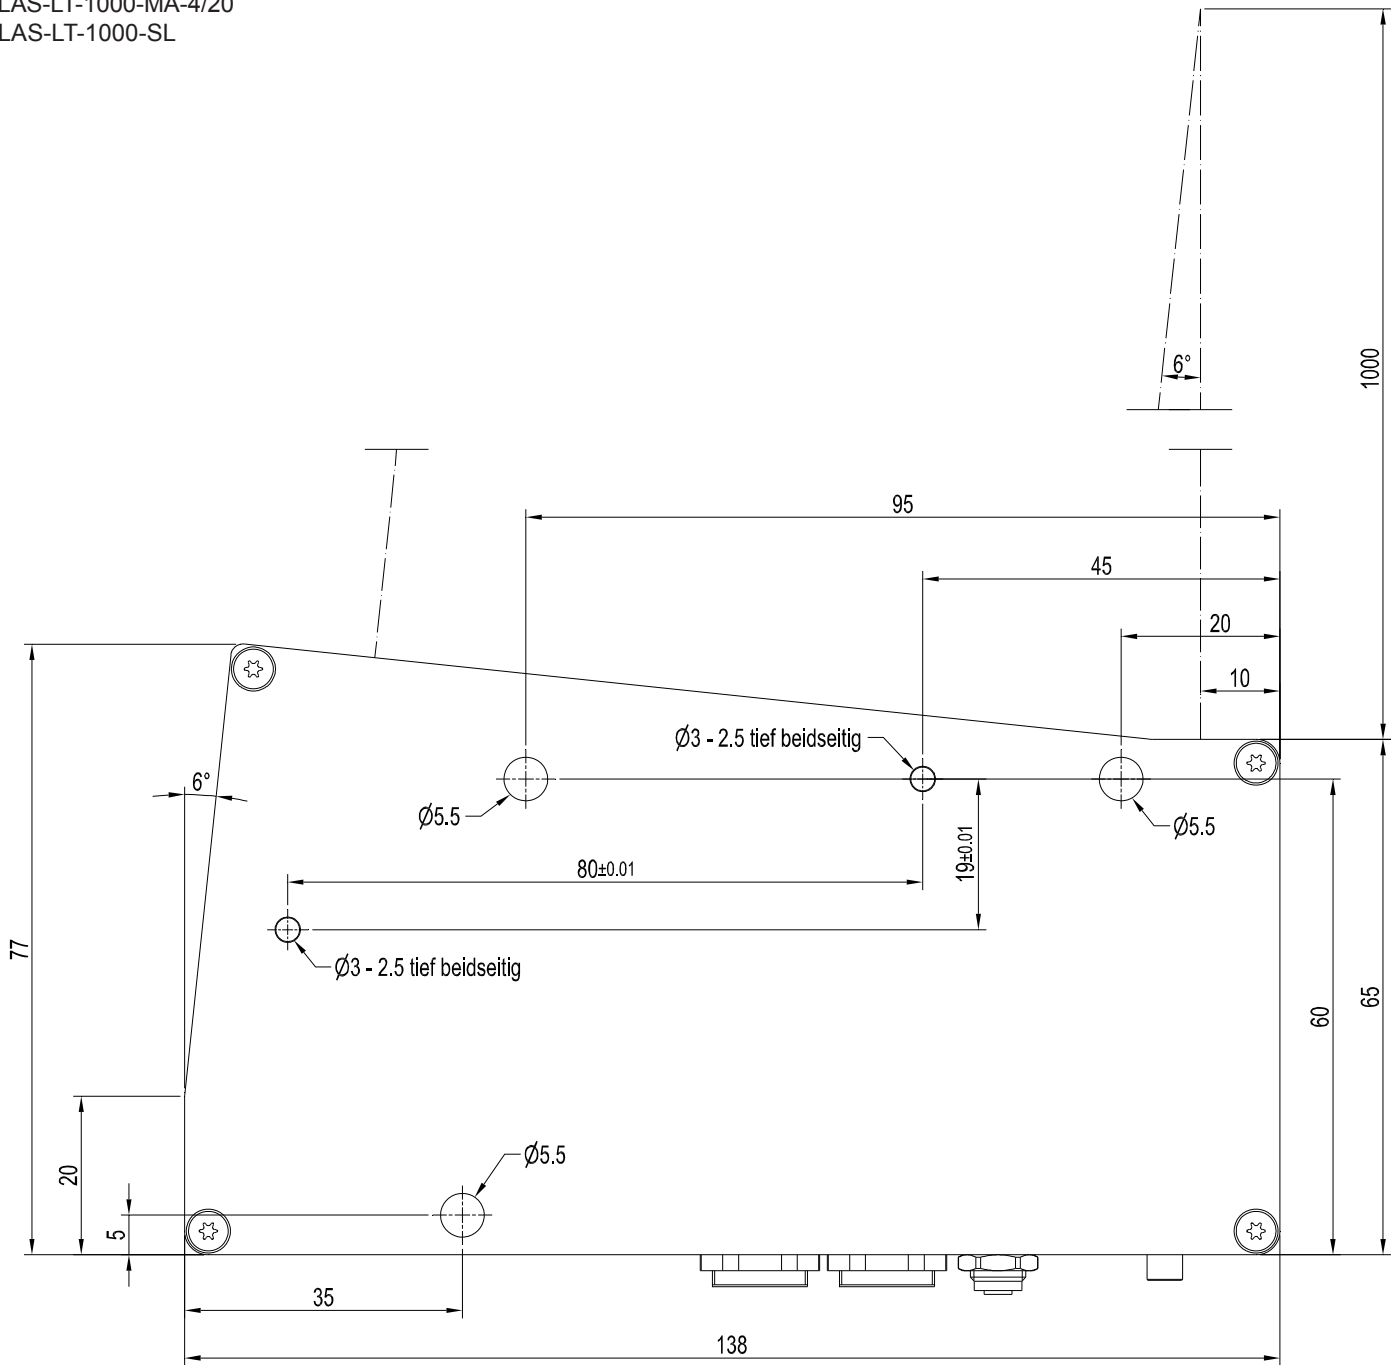


All dimensions in mm



**Beam Path**

L-LAS-LT-1000-MA  
L-LAS-LT-1000-MA-4/20  
L-LAS-LT-1000-SL

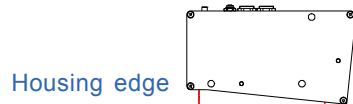

Start of measuring range typ. 450 mm

Measuring range typ. 950 mm

End of measuring range typ. 1400 mm





### Components of a complete Master/Slave system L-LAS-LT-1000-MS:

#### Standard version with analog voltage output 0...+10V:

**1x L-LAS-LT-1000-MA** (Master, incl. Windows® software L-LAS-LT-MS-Scope)

**1x L-LAS-LT-1000-SL** (Slave)

**1x cab-las7-male-...** (Connecting cable, connection of Master to Slave)

**2x cab-las8/SPS-...** (Connecting cable to PLC, necessary for each Master and Slave)

**1x cab-las4/PC-...** (Connecting cable to PC via RS232 interface, necessary for Master only)

alternative: **1x cab-las4/USB-...** (Connecting cable to PC via USB interface, necessary for Master only)

alternative: **1x SI-RS232/Ethernet-4-...** (Connecting cable to PC via Ethernet interface, for Master only)

#### Standard version with analog current output 4...20mA:

**1x L-LAS-LT-1000-MA-4/20** (Master, incl. Windows® software L-LAS-LT-MS-Scope)

**1x L-LAS-LT-1000-SL** (Slave)

**1x cab-las7-male-...** (Connecting cable, connection of Master to Slave)

**2x cab-las8/SPS-...** (Connecting cable to PLC, necessary for each Master and Slave)

**1x cab-las4/PC-...** (Connecting cable to PC via RS232 interface, necessary for Master only)

alternative: **1x cab-las4/USB-...** (Connecting cable to PC via USB interface, necessary for Master only)



alternative: **1x SI-RS232/Ethernet-4-...** (Connecting cable to PC via Ethernet interface, for Master only)



Connection Scheme

**Connection scheme for a L-LAS-LT-... MS system**

(by way of example L-LAS-LT-55-MS)

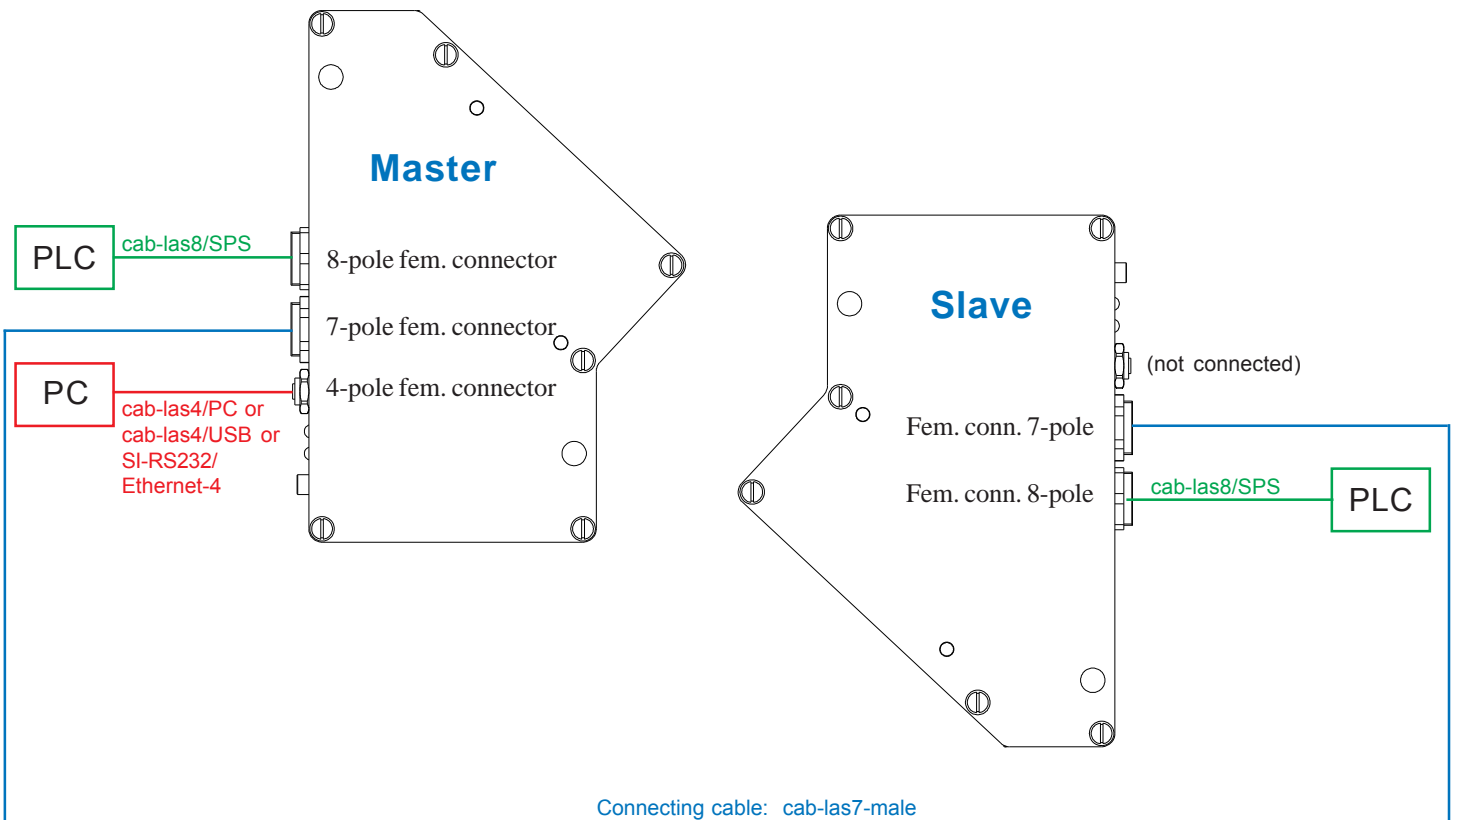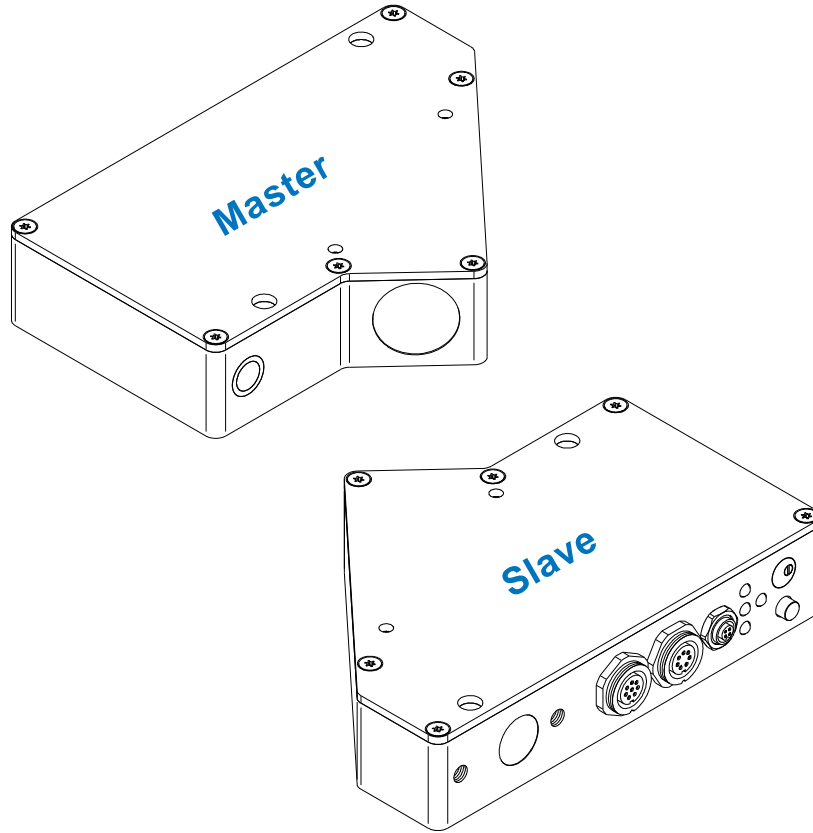




## Connector Assignment

### Connector assignment of Master L-LAS-LT-...-MA or L-LAS-LT-...-MA -4/20:

#### Connection to PLC/Power:

##### 8-pole fem. connector Binder Series 712


Pin:	Color:	Assignment:
1	white	GND (0V)
2	brown	+24VDC ( $\pm 10\%$ )
3	green	IN0 (EXT TRIGGER)
4	yellow	IN1 (TEACH / RESET)
5	grey	OUT0 (-)
6	pink	OUT1 (+)
7	blue	OUT2 (OK)
8	red	ANA (voltage 0 ... +10V) (optional: current 4 ... 20mA)

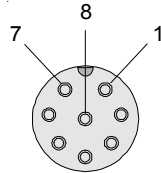

#### Connection Master/Slave (SPI):

##### 7-pole fem. connector Binder Series 712

Pin:	Assignment:
1	GND (0V)
2	+3.3VDC
3	SS
4	MISO
5	MOSI
6	SCLK
7	+3.3VDC

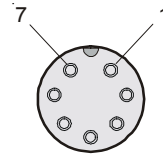

#### Connecting cable:

cab-las8/SPS-(length) or  
cab-las8/SPS-w-(length) (right-angle type)  
(standard length 2m)

#### Connecting cable:


cab-las7-male-(length)  
cab-las7-male-w-(length) (right-angle type) VAR. 1  
cab-las7-male-w-(length) (right-angle type) VAR. 2  
cab-las7-male-w-(length) (right-angle type) VAR. 3  
(standard length 1m)

### Connection to PC:

#### 4-pole fem. connector Binder Series 707

Pin: Assignment:

Pin:	Assignment:
1	+24VDC (+Ub, OUT)
2	GND (0V)
3	Rx0
4	Tx0

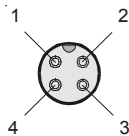

#### Connection via RS232 interface at the PC:

##### Connecting cable:

cab-las4/PC-(length)  
cab-las4/PC-w-(length) (right-angle type)  
(standard length 2m)

#### **alternative:**

##### Connection via USB interface at the PC:

##### Connecting cable (incl. driver software):

cab-las4/USB-(length)  
cab-las4/USB-w-(length) (right-angle type)  
(standard length 2m)

#### **alternative:**

##### Connection to local network via Ethernet bus:

##### Adapter (based on Lantronix XPortModul):

SI-RS232/Ethernet-4-(length)  
(standard length 2m)






## Connector Assignment


### Connector assignment of Slave L-LAS-LT-...-SL:

#### Connection to Power: 8-pole fem. connector Binder Series 712

Pin:	Color:	Assignment:
1	white	GND (0V)
2	brown	+24VDC ( $\pm 10\%$ )
3	green	not used
4	yellow	not used
5	grey	not used
6	pink	not used
7	blue	not used
8	red	not used

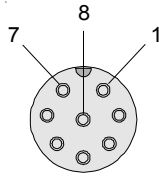

Connecting cable:  
cab-las8/SPS-(length) or  
cab-las8/SPS-w-(length) (right-angle type)  
(standard length 2m)

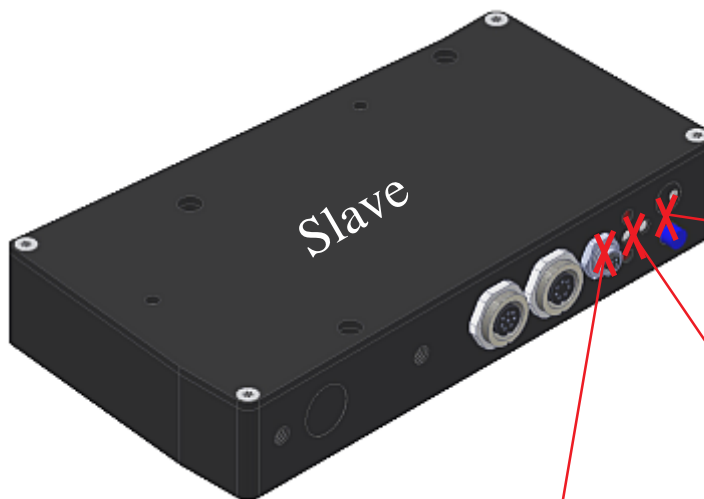

Potentiometer and teach button at the Slave are inactive.

LED display at the Slave is inactive.

**Attention:**  
4-pole connector at the Slave is inactive. Please use the RS232/USB interface at the Master!





Connecting Cables


Connection L-LAS-LT-...-MA (or L-LAS-LT-...-MA-4/20) to PLC:  
 Connection L-LAS-LT-...-SL to PLC:

Available connecting cables:

**cab-las8/SPS-(length)** or  
**cab-las8/SPS-w-(length)**  
 (standard length: 2m)

**cab-las8/SPS-...**  
 (max. length 25m, outer jacket: PUR)

**cab-las8/SPS-w-...** (right-angle type)  
 (max. length 25m, outer jacket: PUR)


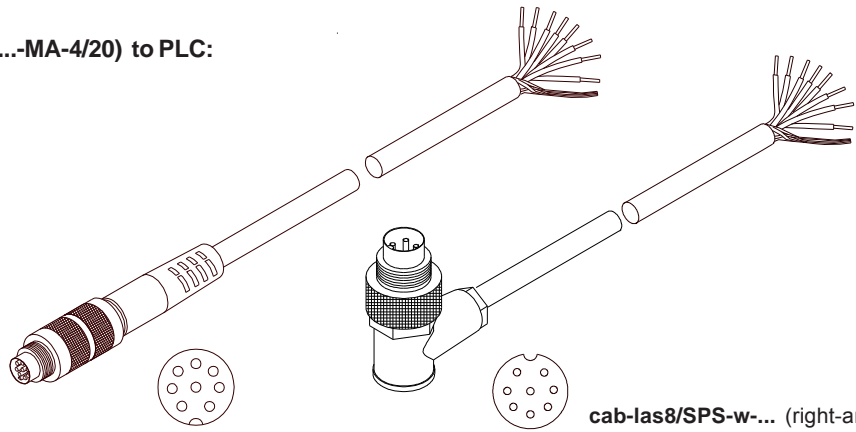


Connection L-LAS-LT-...-MA to L-LAS-LT-...-SL:  
 Connection L-LAS-LT-...-MA-4/20 to L-LAS-LT-...-SL:

Available connecting cables:

**cab-las7-male-(length)**  
**cab-las7-male-w-(length) VAR. 1**  
**cab-las7-male-w-(length) VAR. 2**  
**cab-las7-male-w-(length) VAR. 3**  
 (standard length: 1m)

**cab-las7-male-...**  
 (max. length 5m, outer jacket: PUR)

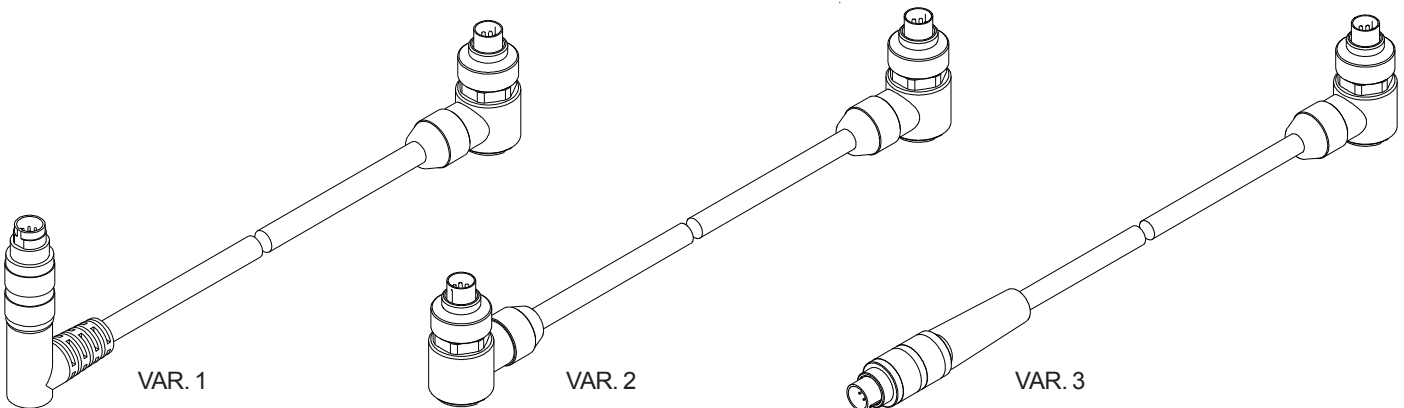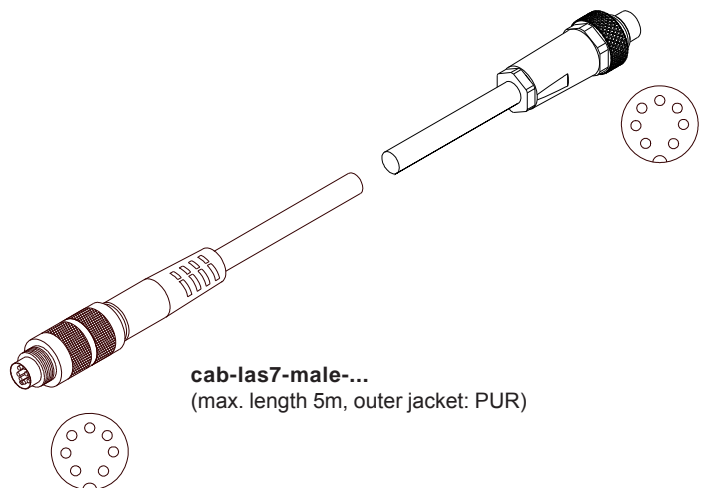

**cab-las7-male-w-... VAR. 1**  
**(right-angle type)**  
 (max. length 5m, outer jacket: PUR)

**cab-las7-male-w-... VAR. 2**  
**(right-angle type)**  
 (max. length 5m, outer jacket: PUR)

**cab-las7-male-w-... VAR. 3**  
**(right-angle type)**  
 (max. length 5m, outer jacket: PUR)




## Connecting Cables

Connection L-LAS-LT-...-MA to PC  
 Connection L-LAS-LT-...-MA-4/20 to PC:  
 via **RS232 interface**

Available connecting cables:

**cab-las4/PC-(length)** or  
**cab-las4/PC-w-(length)**  
 (standard length: 2m)

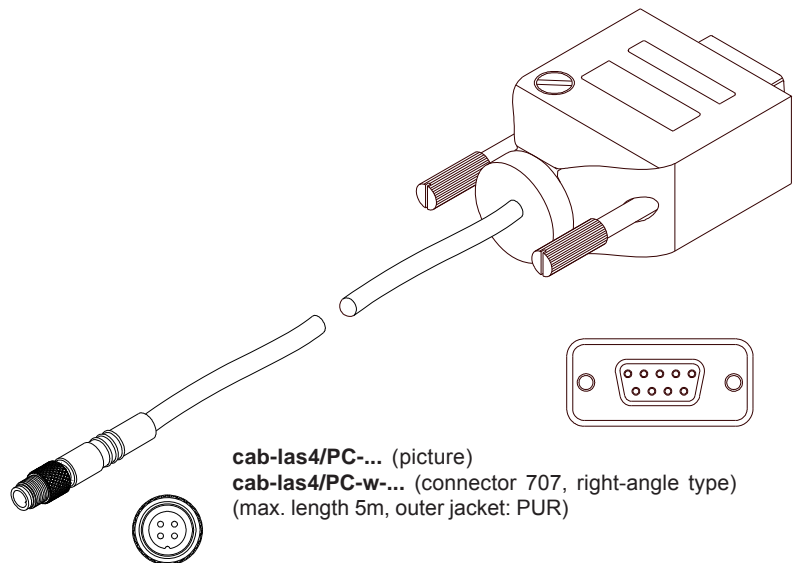


**cab-las4/PC-...** (picture)  
**cab-las4/PC-w-...** (connector 707, right-angle type)  
 (max. length 5m, outer jacket: PUR)

**Alternative:**  
 Connection L-LAS-LT-...-MA to PC  
 Connection L-LAS-LT-...-MA-4/20 to PC:  
 via **USB interface**

Available connecting cables (incl. driver software):

**cab-las4/USB-(length)** or  
**cab-las4/USB-w-(length)**  
 (standard length: 2m)

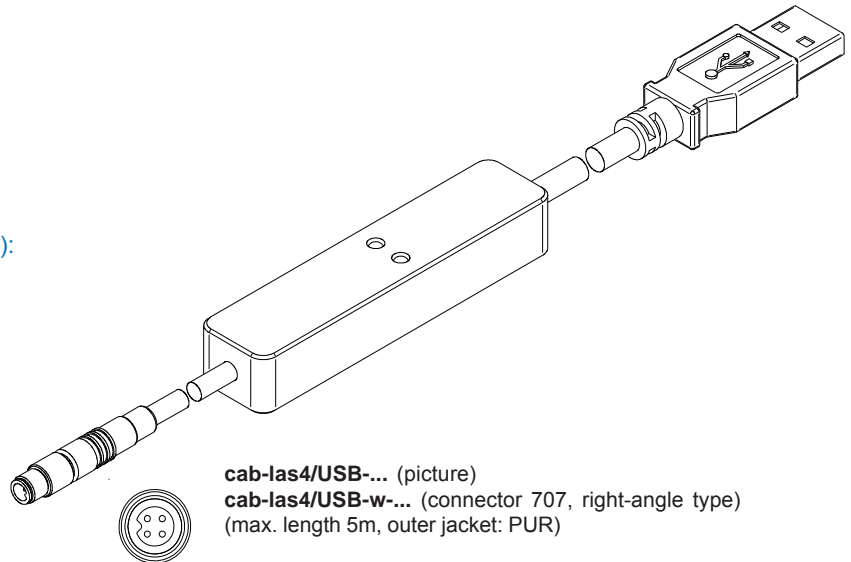


**cab-las4/USB-...** (picture)  
**cab-las4/USB-w-...** (connector 707, right-angle type)  
 (max. length 5m, outer jacket: PUR)

**Alternativee:**

Anschluss L-LAS-LT-...-MA to a local network:  
 Anschluss L-LAS-LT-...-MA-4/20 to a local network:  
 via **Ethernet bus**

Adapter (based on Lantronix XPortModul):


**SI-RS232/Ethernet-4-(length)**  
 (standard length: 2m)

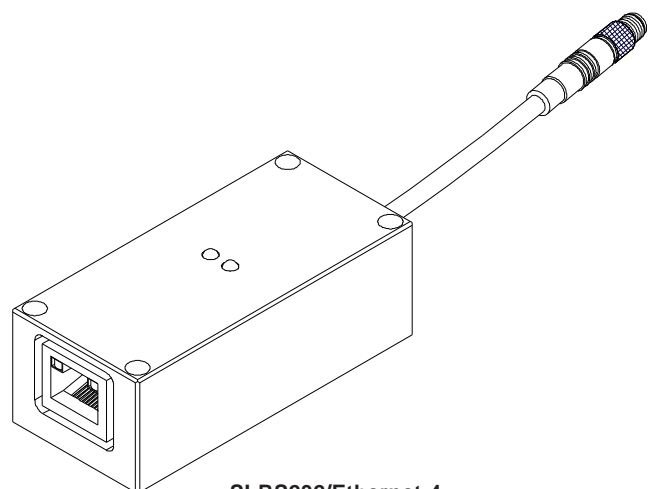

**SI-RS232/Ethernet-4-...**  
 (available lengths: 0,5m, 1m, or 2m,  
 outer jacket: PUR)



**LED Display**

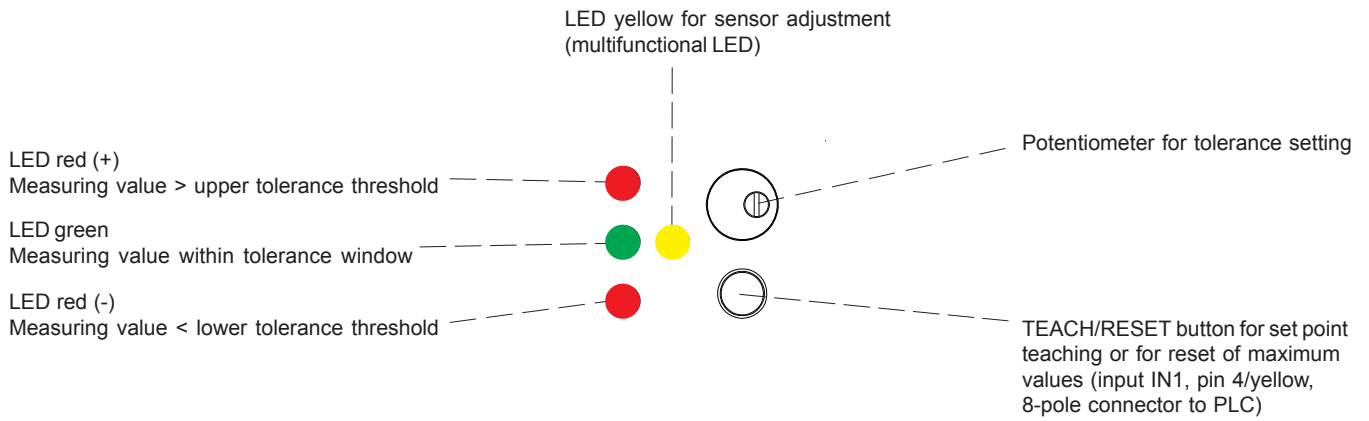

LED display is only active at the Master:


L-LAS-LT-110-MA  
L-LAS-LT-110-MA-4/20



**Laser Warning**

The laser line sensors of L-LAS Series comply with laser class 2 according to EN 60825-1. The use of these laser transmitters therefore requires no additional protective measures.


The laser line sensors of L-LAS Series are supplied with a laser warning label.

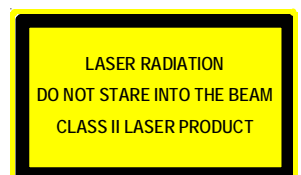



**Parameterization**
**Windows® software L-LAS-LT-MS-Scope:**

The L-LAS-LT...-MS sensor can be easily parameterised with the Windows® user interface. For this purpose the sensor is connected to the PC with the serial interface cable cab-las4/PC (or with USB cable cab-las4/USB or with Ethernet adapter SI-RS232/Ethernet-4). When parameterisation is finished, the PC can be disconnected again.

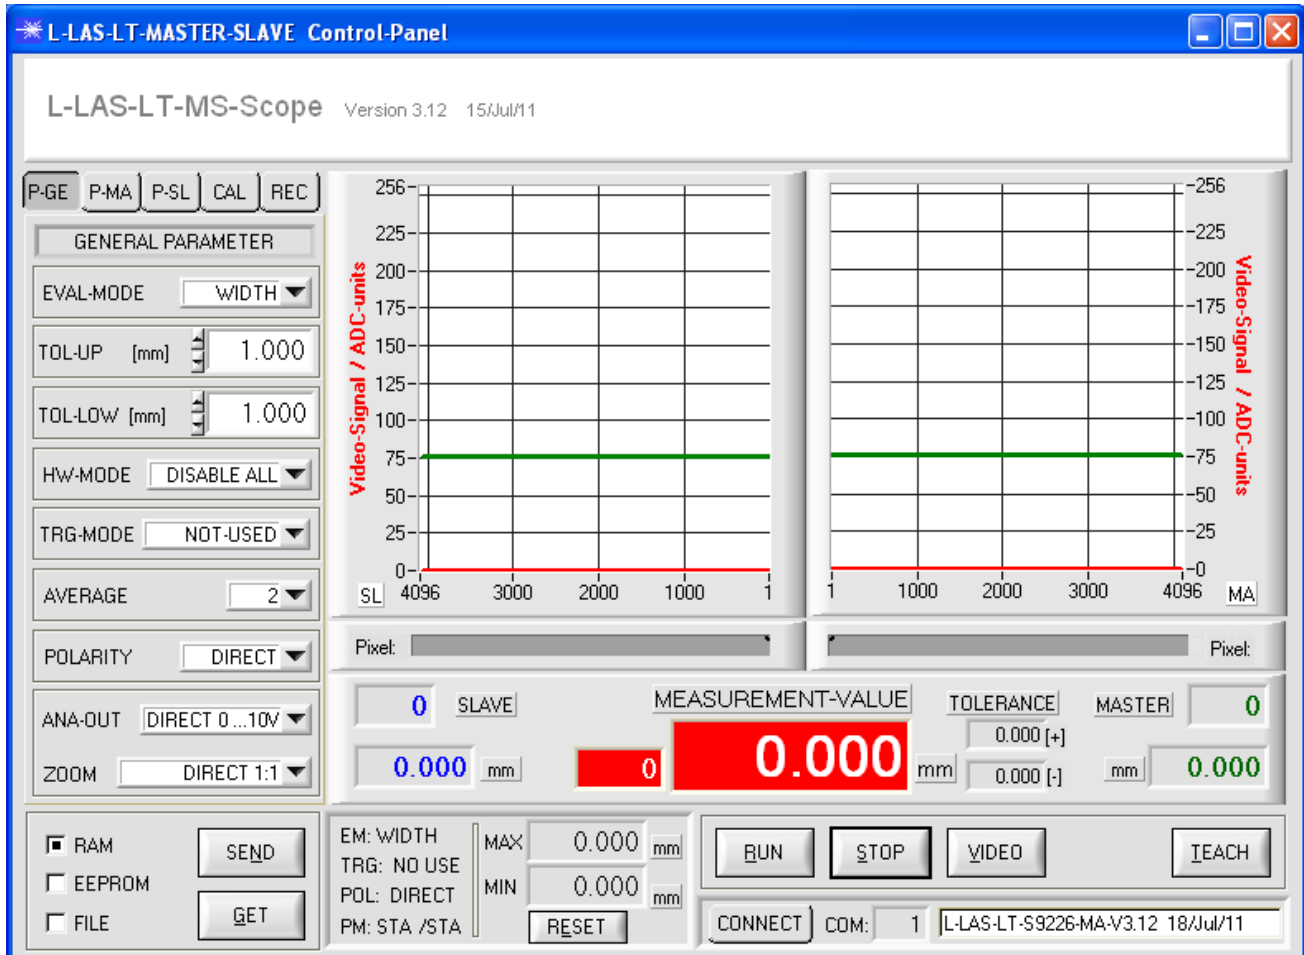**Windows® user interface:**

In the case of line sensors with 512, 256, or 128 pixels the parameters related to the pixels will be adapted correspondingly!

With the help of the L-LAS-LT-MS-Scope software the following settings can be made at the sensor:

- Setting of laser power and type of automatic power correction
- Polarity of digital outputs
- Different evaluation modes
- Start of the teach process by software button
- Setting of tolerance ranges for monitoring the measured value

Furthermore, various numerical and graphical measured quantities can be visualized with the L-LAS-LT-MS-Scope software. For example, the raw data of the CCD line sensor can be displayed graphically and numerically.